Specification

Innolume GmbH Konrad-Adenauer-Allee 11 44263 Dortmund, Germany

SML1080B50YY400MXXXX

Fiber Coupled High Power Fabry-Perot Laser Diode



Features:

- Kink-free operation up to 400mW at 1080nm
- Individual burn-in and thermal cycling screening
- Proprietary mirror coating technology enabling high reliability
- Built-in monitor photodiode (optional)
- 900um loose tube on fiber (optional)

Applications:

Recommended Operating Conditions				
@ CW, the case is mounted on room temperature heatsink				
Parameter	Min.	Тур.	Max.	Unit
Chip Temperature*	20	25	30	°C
Forward Current		800	900	mA
Output Power**	50		400	mW

^{*} in some cases may vary

^{**} kink-free over the entire range

Characteristics				
@ CW, 25°C*, 800mA				
Parameter	Min.	Тур.	Max.	Unit
Forward Current @ 400mW			900	mA
Forward Voltage		1.7	1.9	V
Threshold Current		70	120	mA
Mean Wavelength	1075	1080	1085	nm
Bandwidth (FWHM)		0.2	4	nm
Wavelength Temperature Tunability		0.35		nm/°C
Polarisation Extinction Ratio (PER)	15	17		dB
Polarisation		TE		

^{*} in some cases may vary in 20-30°C range.


Absolute Maximum Ratings				
Parameter	Min	Max	Unit	
Forward Current		1000	mA	
Reverse Voltage		2	V	
TEC Current		3	Α	
TEC Voltage		4	V	
Chip Operating Temperature	5	40	°C	
Case Operating Temperature	0	70	°C	
Pin Soldering Temperature (max 10 sec, max case temperature 120°C)		300	°C	
Storage Temperature	-40	85	°C	
Fiber Band Radius	3		cm	

Fiber specification




Typical Performance (for reference only)


Light Current Voltage Characteristics

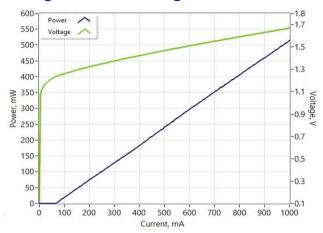


Optical Spectra (res. 50pm)

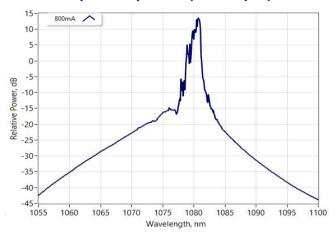


Thermistor specification			
Parameters	Value	Unit	
Туре	NTC		
Resistance @ 25°C	10±0.1	kOhm	
Beta 25-85°C	3435±1%	K	

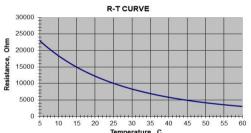

	Parameters	Value	Value	Unit
	Fiber Type	HI1060	PM980	•
	Numerical Aperture (Typical)	0.14	0.12	
	Cut-off Wavelength	920±50	900±70	nm
	Mode-Field (core) Diameter	6.2±0.3 @1060nm	6.6±0.3 @1060nm	μm
	Cladding Diameter	125±1	125±1	μm
	Continue (buffor) Disperston	045.45	045.45	

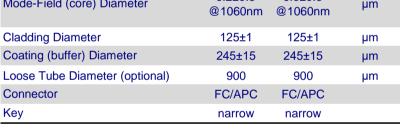

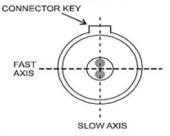


The output light is polarized along the slow axis of PM fiber.

Part-number Identification

SML1080D50PM400MXXXX -> 400mW output power at 1080nm mean wavelength, PM980 fiber SML1080D50HI400MFXXX -> 400mW output power at 1080nm mean wavelength, HI1060 fiber, with built-in monitor photodiode

SML1080D50HI400MLXXX -> 400mW output power at 1080nm mean wavelength, HI1060 fiber, with loose tube SML1080D50PM400MFLXX -> 400mW output power at 1080nm mean wavelength, PM980 fiber, with built-in monitor photodiode and with loose tube

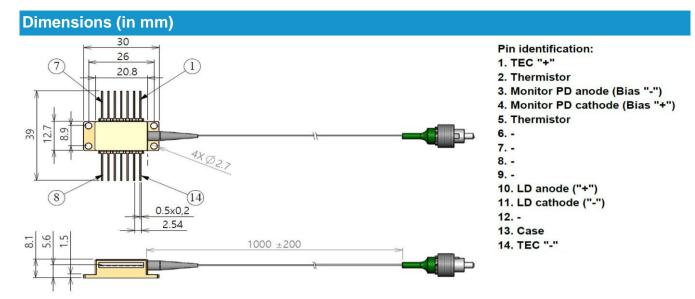

Safety and Operating Instructions

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector. Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this. Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any

contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.







NOTE: Innolume product specifications are subject to change without notice