# INNOLUME

### **Specification**

## SML1240005YY700MXXXX Fiber Coupled High Power Fabry-Perot Laser Diode

#### Features:

- Kink-free operation up to 700mW at 1240nm
- InAs/GaAs Quantum Dot based diode laser
- Individual burn-in and thermal cycling screening
- · Proprietary mirror coating technology enabling high reliability
- Built-in monitor photodiode (optional)
- 900um loose tube on fiber (optional)

#### **Applications:**

Raman Amplifier pumping

Recommended Operating Conditions						
@ CW, the case is mounted on room temperature heatsink						
Parameter	Min.	Тур.	Max.	Unit		
Chip Temperature*	20	25	45	°C		
Forward Current		1700	2000	mA		
Output Power**	50		700	mW		
* in some cases may vary						

\*\* kink-free over the entire range

Characteristics				
@ CW, 25°C*, 1700mA				
Parameter	Min.	Тур.	Max.	Unit
Forward Current @ 700mW			2000	mA
Forward Voltage		1.8	2.1	V
Threshold Current		100	180	mA
Mean Wavelength	1235	1240	1245	nm
Bandwidth (FWHM)		6	10	nm
Wavelength Temperature Tunability		0.5		nm/°C
Polarisation Extinction Ratio (PER)	15	18		dB
Polarisation		TE		

\* in some cases may vary in 20-45°C range.


Absolute Maximum Ratings					
Parameter	Min	Мах	Unit		
Forward Current		2000	mA		
Reverse Voltage		2	V		
TEC Current		3	А		
TEC Voltage		4	V		
Chip Operating Temperature	5	50	°C		
Case Operating Temperature	0	70	°C		
Pin Soldering Temperature (max 10 sec, max case temperature 120°C)		300	°C		
Storage Temperature	-40	85	°C		
Fiber Band Radius	3		cm		




# INNOLUME

### **Specification**


#### **Typical Performance (for reference only)**

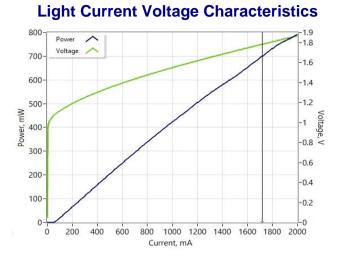

#### **Optical Spectra (res. 50pm)**

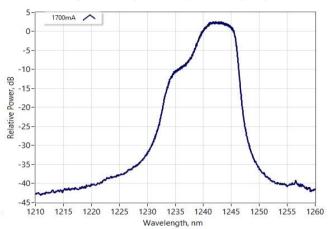

Thermistor specification		Fiber specification				
Parameters	Value	Unit	Parameters	Value	Value	Unit
Туре	NTC		Fiber Type	HI1060	PM980	
Resistance @ 25°C	10±0.1	kOhm	Numerical Aperture (Typical)	0.14	0.12	
Beta 25-85°C	3435±1%	К	Cut-off Wavelength	920±50	900±70	nm
R-T CURVE		Mode-Field (core) Diameter	6.2±0.3 @1060nm	6.6±0.3 @1060nm	μm	
20000 5000 0		Cladding Diameter	125±1	125±1	μm	
	Coating (buffer) Diameter	245±15	245±15	μm		
	Loose Tube Diameter (optional)	900	900	μm		
	Connector	FC/APC	FC/APC			
5 10 15 20 25 Te	5 30 35 40 45 emperature, C	50 55 60	Кеу	narrow	narrow	

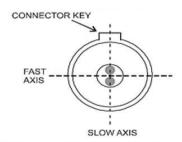

The output light is polarized along the slow axis of PM fiber.


#### **Part-number Identification**

SML1240005PM700MXXXX -> 700mW output power at 1240nm mean wavelength, PM980 fiber SML1240005HI700MFXXX -> 700mW output power at 1240nm mean wavelength, HI1060 fiber, with built-in monitor photodiode

SML1240005HI700MLXXX -> 700mW output power at 1240nm mean wavelength, HI1060 fiber, with loose tube SML1240005PM700MFLXX -> 700mW output power at 1240nm mean wavelength, PM980 fiber, with built-in monitor photodiode and with loose tube

# INNOLUME

### **Specification**

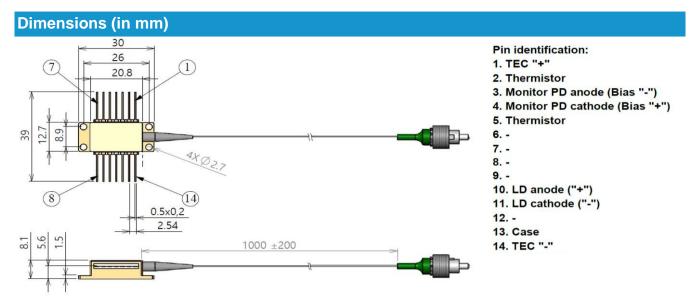


#### **Safety and Operating Instructions**

The light emitted from this device is invisible and can be harmful to the human eye. Avoid looking directly into the fiber connector when the device is in operation. Proper laser safety eyewear must be worn during operation with open connector. Absolute Maximum Ratings may be applied to the device for short period of time only. Exposure to maximum ratings for extended period of time or exposure to more than one maximum rating may cause damage or affect the reliability of the device. Operating the device outside of its maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed such that the maximum forward current cannot be exceeded.

A proper heatsink for the device on thermal radiator is required. The device must be mounted on radiator with 4 screws (bolt down in X-style fashion with initial torque set to 0.075Nm and final X-style bolt down at 0.15Nm) or with clamps. The deviation from flatness of radiator surface must be less than 0.05mm. It's recommended using of Indium foil or thermal conductive and soft material between bottom of the case and heatsink for thermal interface. It's undesirable to use thermal grease for this. Avoid back reflection to the device. It may give impact on the device performance in aspects of spectrum and power stability. It also may cause fatal facet damage. Using of optical isolators is highly recommended to block back reflection. Do not pull the fiber. Do not bend a fiber with a radius smaller than 3 cm. Fiber tip should always be protected from any

contamination or damage during the process of installation. After removing the dust-preventing cap covered at fiber tip, carefully clean fiber tip by wiping through one direction using optical lens cleaning paper or cotton swab dabbed with Iso-Propanol or Ethyl alcohol. Operate the device with clean fiber connector only.

Electrostatic discharge is the primary cause of unexpected product failure. Take extreme precaution to prevent ESD. During device installation, ESD protection has to be maintained - use wrist straps, grounded work surfaces and rigorous antistatic techniques when handling the product.

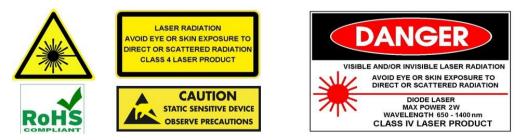

NOTE: Innolume product specifications are subject to change without notice